

Емкостные датчики

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: ezu@nt-rt.ru || сайт: <https://leuze.nt-rt.ru/>



LCS-1M12M-F04PNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 4 mm

Connection: Connector, M12



LCS-1M12M-F04PNC-M12

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 4 mm

Connection: Connector, M12



LCS-1M12M-F04NNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 4 mm

Connection: Connector, M12



LCS-1M12M-F04NNC-M12

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 4 mm

Connection: Connector, M12



LCS-1M12M-F04PNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 4 mm

Connection: Cable



LCS-1M12M-F04PNC-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 4 mm

Connection: Cable



LCS-1M12M-F04NNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 4 mm

Connection: Cable



LCS-1M12M-F04NNC-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 4 mm

Connection: Cable



LCS-1M12P-F04PNC-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 4 mm

Connection: Cable



LCS-1M18P-F05PNP-M12-LT

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 7.5 mm

Connection: Connector, M12



LCS-1M18P-F05NNP-M12-LT

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 7.5 mm

Connection: Connector, M12



LCS-1M30M-F15PNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-1M30M-F15PNC-M12

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-1M30M-F15NNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-1M30M-F15NNC-M12

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-1M30M-F15PNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-1M30M-F15PNC-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-1M30M-F15NNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-1M30P-F15PNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-1M30P-F15PNC-M12

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-1M30P-F15NNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-1M30P-F15PNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-1M30P-F15PNC-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-1M30P-F10PNP-M12-LT

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 15 mm

Connection: Connector, M12



LCS-1M30P-F10NNP-M12-LT

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 15 mm

Connection: Connector, M12



LCS-1Q40P-F20PNO-K003PM08

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 20 mm

Connection: Connector, M8



LCS-1Q40P-F20BNP-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 20 mm

Connection: Cable



LCS-1Q54P-F10PNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 10 mm

Connection: Cable



LCS-1Q54P-F10PNC-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 10 mm

Connection: Cable



LCS-1Q54P-F10NNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 10 mm

Connection: Cable



LCS-1Q54P-F10NNC-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 10 mm

Connection: Cable



LCS-1M12M-N08PNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Connector, M12



LCS-1M12M-N08PNC-M12

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Connector, M12



LCS-1M12M-N08NNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Connector, M12



LCS-1M12M-N08PNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Cable



LCS-1M12M-N08PNC-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Cable



LCS-1M12M-N08NNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Cable



LCS-1M12M-N08NNC-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Cable



LCS-1M12P-N08PNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Connector, M12



LCS-1M12P-N08PNC-M12

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Connector, M12



LCS-1M12P-N08NNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Connector, M12



LCS-1M12P-N08NNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Cable



LCS-1M12T-N08PNO-K020T

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Cable



LCS-1M12T-N08PNC-K020T

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Cable



LCS-1M12T-N08NNO-K020T

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Cable



LCS-1M12T-N08NNC-K020T

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 8 mm

Connection: Cable



LCS-1M18T-N15PNO-K020T

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-1M18T-N15PNC-K020T

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-1M18T-N15NNO-K020T

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-1M18T-N15NNC-K020T

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-1M30M-N25PNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 25 mm

Connection: Connector, M12



LCS-1M30M-N25PNC-M12

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 25 mm

Connection: Connector, M12



LCS-1M30M-N25NNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 25 mm

Connection: Connector, M12



LCS-1M30M-N25PNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 25 mm

Connection: Cable



LCS-1M30M-N25PNC-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 25 mm

Connection: Cable



LCS-1M30M-N25NNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 25 mm

Connection: Cable



LCS-1M30P-N25PNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 25 mm

Connection: Connector, M12



LCS-1M30P-N25PNC-M12

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 25 mm

Connection: Connector, M12



LCS-1M30P-N25NNO-M12

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 25 mm

Connection: Connector, M12



LCS-1M30P-N25PNO-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 25 mm

Connection: Cable



LCS-1M30P-N25NNC-K020P

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 25 mm

Connection: Cable



LCS-1M30T-N30PNO-K020T

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Cable



LCS-1M30T-N30PNC-K020T

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Cable



LCS-1M30T-N30NNO-K020T

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Cable



LCS-1M30T-N30NNC-K020T

Capacitive sensor

Series: LCS-1

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Cable



LCS-2M12B-F03PNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Connector, M12



LCS-2M12B-F03PNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Connector, M12



LCS-2M12B-F03NNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Connector, M12



LCS-2M12B-F03NNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Connector, M12



LCS-2M12B-F03PNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Cable



LCS-2M12B-F03PNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Cable



LCS-2M12B-F03NNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Cable



LCS-2M12B-F03NNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Cable



LCS-2M12P-F03PNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Connector, M12



LCS-2M12P-F03PNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Connector, M12



LCS-2M12P-F03NNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Connector, M12



LCS-2M12P-F03NNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Connector, M12



LCS-2M12P-F03PNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Cable



LCS-2M12P-F03PNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Cable



LCS-2M12P-F03NNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Cable



LCS-2M12P-F03NNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 1 ... 3 mm

Connection: Cable



LCS-2M18B-F08PNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Connector, M12



LCS-2M18B-F08PNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Connector, M12



LCS-2M18B-F08NNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Connector, M12



LCS-2M18B-F08NNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Connector, M12



LCS-2M18B-F08PNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Cable



LCS-2M18B-F08PNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Cable



LCS-2M18B-F08NNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Cable



LCS-2M18B-F08NNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Cable



LCS-2M18P-F08PNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Connector, M12



LCS-2M18P-F08PNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Connector, M12



LCS-2M18P-F08NNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Connector, M12



LCS-2M18P-F08NNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Connector, M12



LCS-2M18P-F08PNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Cable



LCS-2M18P-F08PNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Cable



LCS-2M18P-F08NNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Cable



LCS-2M18P-F08NNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 8 mm

Connection: Cable



LCS-2M30B-F20PNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Connector, M12



LCS-2M30B-F20PNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Connector, M12



LCS-2M30B-F20NNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Connector, M12



LCS-2M30B-F20NNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Connector, M12



LCS-2M30B-F20PNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Cable



LCS-2M30B-F20PNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Cable



LCS-2M30B-F20NNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Cable



LCS-2M30B-F20NNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Cable



LCS-2M30P-F20PNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Connector, M12



LCS-2M30P-F20PNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Connector, M12



LCS-2M30P-F20NNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Connector, M12



LCS-2M30P-F20NNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Connector, M12



LCS-2M30P-F20PNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Cable



LCS-2M30P-F20PNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Cable



LCS-2M30P-F20NNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Cable



LCS-2M30P-F20NNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Embedded

Switching distance S_n , max.: 2 ... 20 mm

Connection: Cable



LCS-2M12B-N06PNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Connector, M12



LCS-2M12B-N06PNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Connector, M12



LCS-2M12B-N06NNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Connector, M12



LCS-2M12B-N06NNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Connector, M12



LCS-2M12B-N06PNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Cable



LCS-2M12B-N06PNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Cable



LCS-2M12P-N06PNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Connector, M12



LCS-2M12P-N06PNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Connector, M12



LCS-2M12P-N06NNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Connector, M12



LCS-2M12P-N06NNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Connector, M12



LCS-2M12P-N06PNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Cable



LCS-2M12P-N06PNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Cable



LCS-2M12P-N06NNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Cable



LCS-2M12P-N06NNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 1 ... 6 mm

Connection: Cable



LCS-2M18B-N15PNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-2M18B-N15PNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-2M18B-N15NNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-2M18B-N15NNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-2M18B-N15PNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-2M18B-N15PNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-2M18B-N15NNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-2M18B-N15NNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-2M18P-N15PNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-2M18P-N15PNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-2M18P-N15NNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-2M18P-N15NNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Connector, M12



LCS-2M18P-N15PNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-2M18P-N15PNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-2M18P-N15NNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-2M18P-N15NNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 15 mm

Connection: Cable



LCS-2M30B-N30PNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Connector, M12



LCS-2M30B-N30PNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Connector, M12



LCS-2M30B-N30NNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Connector, M12



LCS-2M30B-N30NNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Connector, M12



LCS-2M30B-N30PNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Cable



LCS-2M30B-N30PNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Cable



LCS-2M30B-N30NNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Cable



LCS-2M30B-N30NNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Cable



LCS-2M30P-N30PNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Connector, M12



LCS-2M30P-N30PNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Connector, M12



LCS-2M30P-N30NNO-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Connector, M12



LCS-2M30P-N30NNC-M12

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Connector, M12



LCS-2M30P-N30PNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Cable



LCS-2M30P-N30PNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Cable



LCS-2M30P-N30NNO-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Cable



LCS-2M30P-N30NNC-K020V

Capacitive sensor

Series: LCS-2

Type of installation: Non-embedded

Switching distance S_n , max.: 2 ... 30 mm

Connection: Cable

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: ezu@nt-rt.ru || сайт: <https://leuze.nt-rt.ru/>