

Кабели с разъемами на обоих концах

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

 
Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47


эл.почта: ezu@nt-rt.ru || сайт: <https://leuze.nt-rt.ru/>

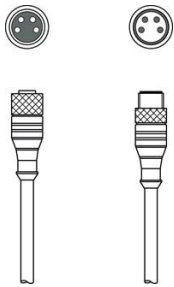

KDS U-M8-4A-M8-4A-P1-100

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 4 -pin

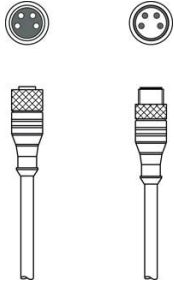

KDS U-M8-4A-M8-4A-P1-015

Interconnection cable

 Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 4 -pin

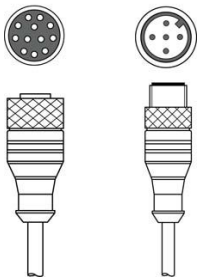

KDS S-12-CA-M12-5A-P1-004-78X

Interconnection cable

 
Connection: Connector, M12 - Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 12 -pin



KDS U-M8-3A-M8-3W-P1-006-A01

Interconnection cable


Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

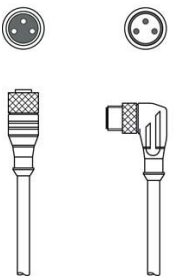

KDS U-M8-3A-M8-3W-P1-003-A01

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

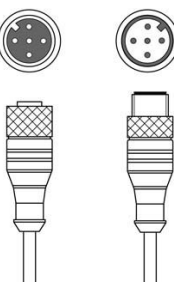

KDS S-M12-5A-M12-5A-P1-200

Interconnection cable

 Connection: Connector, M12 - Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

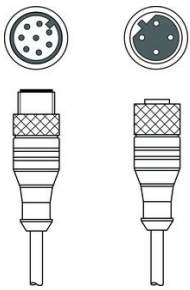

KDS PB-M12-4A-M12-8A-P0-020

 
Interconnection cable

Interface: PROFIBUS DP **Connection:** Connector, M12

-

Connector, M12


Connection 01, version: Axial **Connection 1, no. of pins:** 8
-pin

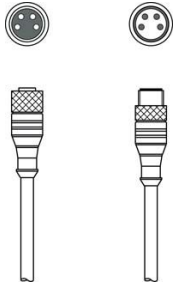

KDS U-M8-4A-M8-4A-P1-030

Interconnection cable

 Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 4 -pin

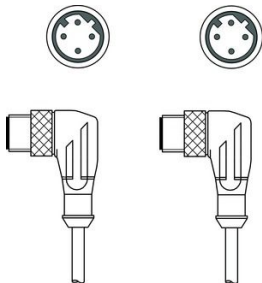


KSS ET-M12-4W-M12-4W-P7-100

Interconnection cable

Interface: Ethernet **Connection:** Connector, M12 -

Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 4
-pin

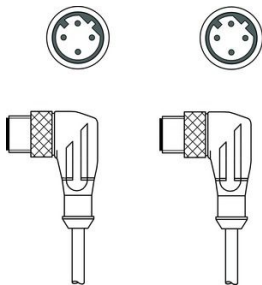


KSS ET-M12-4W-M12-4W-P7-020

Interconnection cable

Interface: Ethernet **Connection:** Connector, M12 -

Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 4
-pin

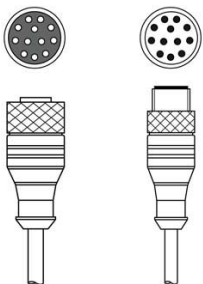

KDS S-M12-CA-M12-CA-P1-003

Interconnection cable

Connection: Connector, M12 -

 
Connector, M12

Connection 01, version: Axial **Connection 1, no. of pins:** 12 -
pin

KSS US-USB2-A-mic-B-V0-018

Interconnection cable

Interface: USB **Connection:** USB - USB

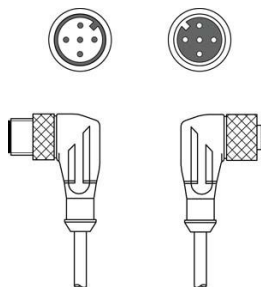


KDS DN-M12-5W-M12-5W-P3-150

Interconnection cable

Interface: CANopen, DeviceNet **Connection:** Connector, M12 -

Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 5 -pin

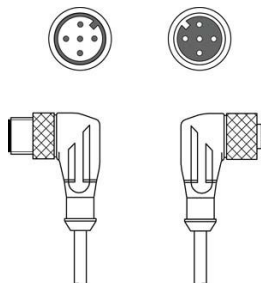


KDS DN-M12-5W-M12-5W-P3-100

Interconnection cable

Interface: DeviceNet, CANopen **Connection:** Connector, M12 -

Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 5 -pin

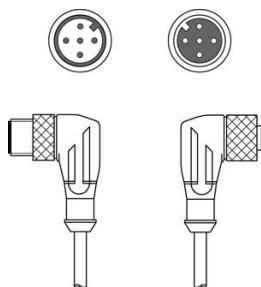


KDS DN-M12-5W-M12-5W-P3-050

Interconnection cable

Interface: DeviceNet, CANopen **Connection:** Connector, M12 -

Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 5 -pin

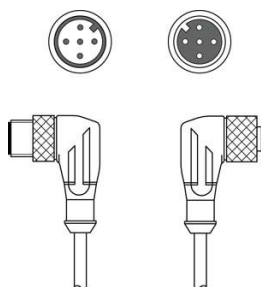


KDS DN-M12-5W-M12-5W-P3-030

Interconnection cable

Interface: DeviceNet, CANopen **Connection:** Connector, M12 -

Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 5 -pin

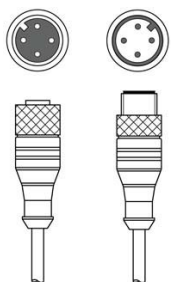

KDS U-M12-4A-M12-4A-V1-150

Interconnection cable

Connection: Connector, M12 -

 
Connector, M12

Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

KDS PL-M12-5A-M12-5A-P0-020 Interconnection cable

Connection: Connector, M12 -


Connector, M12

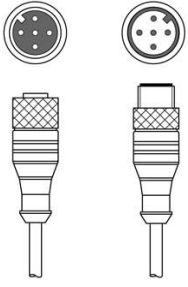

KDS U-M12-5A-M12-5A-P1-003-25X

Interconnection cable

 
Connection: Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

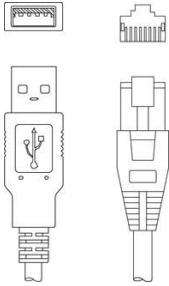

KSS HS-USB-4A-RJ41-AA-T1-020

Interconnection cable

 
Interface: USB **Connection:** RJ41 - USB

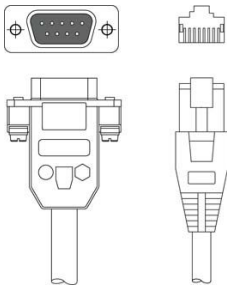

KDS HS-SUB-9A-RJ41-AA-T1-028

Interconnection cable

 
Interface: RS 232 **Connection:** RJ41 - Sub-D

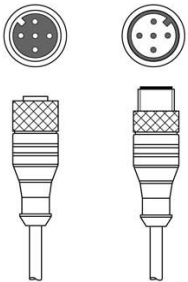

KDS SC-M12-5A-M12-5A-P1-300

Interconnection cable

 Connection: Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

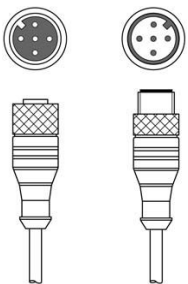

KDS SC-M12-5A-M12-5A-P1-100

 
Interconnection cable

Connection: Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

KDS SC-M12-5A-M12-5A-P1-050

Interconnection cable

Connection: Connector, M12 -
Connector, M12

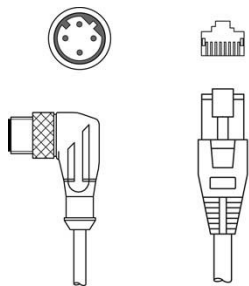


KSS ET-M12-4W-RJ45-A-P7-030

Interconnection cable

Interface: Ethernet

 Connection: Connector, M12 - RJ45 **Connection 01, version:** Angled
Connection 1, no. of pins: 4 -pin

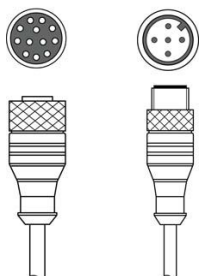


KDS S-M12-CA-M12-5A-P1-004-23X

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 12 -pin

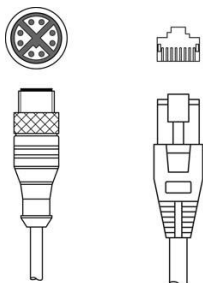


KSS GB-M12-8A-RJ45-A-P7-050

Interconnection cable

Interface: Ethernet

 Connection: Connector, M12 - RJ45 **Connection 01, version:** Axial
Connection 1, no. of pins: 8 -pin

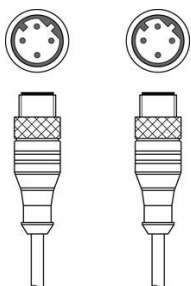


KSS ET-M12-4A-M12-4A-P7-300

Interconnection cable

Interface: Ethernet **Connection:** Connector, M12 -

 Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

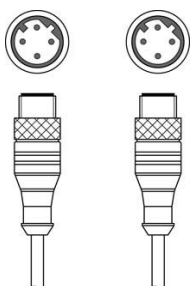

KSS ET-M12-4A-M12-4A-P7-150

Interconnection cable

Interface: Ethernet **Connection:** Connector, M12 -

 
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

KSS ET-M12-4A-M12-4A-P7-100

Interconnection cable

Interface: Ethernet **Connection:** Connector, M12 -

Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

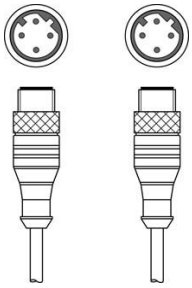


KSS ET-M12-4A-M12-4A-P7-050

Interconnection cable

Interface: Ethernet **Connection:** Connector, M12 -

Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

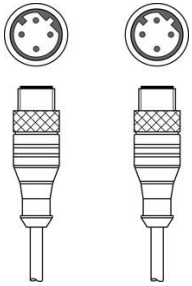


KSS ET-M12-4A-M12-4A-P7-020

Interconnection cable

Interface: Ethernet **Connection:** Connector, M12 -

Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

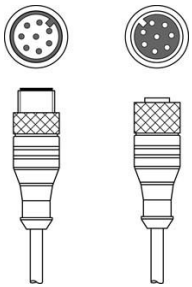


KDS S-M12-8A-M12-8A-P1-003

Interconnection cable

Connection: Connector, M12 -

Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 8 -pin

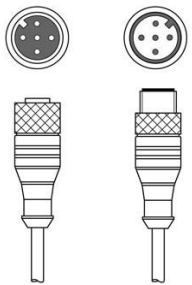


KDS U-M12-5A-M12-5A-V1-200

Interconnection cable

Connection: Connector, M12 -

Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

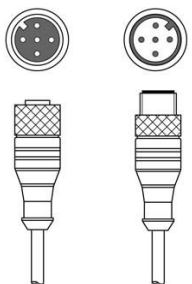

KDS U-M12-5A-M12-5A-V1-150

 
Interconnection cable

Connection: Connector, M12 -

Connector, M12

Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin


KDS U-M12-5A-M12-5A-V1-030 Interconnection cable

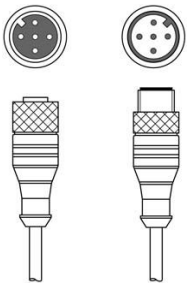

KDS U-M12-5A-M12-5A-V1-010

Interconnection cable

 
Connection: Connector, M12 - Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 - pin

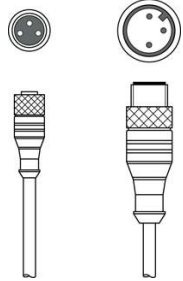

KDS U-M8-3A-M12-3A-V1-010

Interconnection cable

 
Connection: Connector, M8 - Connector, M12 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

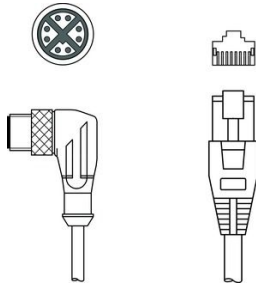

KSS GB-M12-8W-RJ45-A-P7-100

Interconnection cable

 
Interface: Ethernet
Connection: Connector, M12 - RJ45 **Connection 01, version:** Angled
Connection 1, no. of pins: 8 -pin

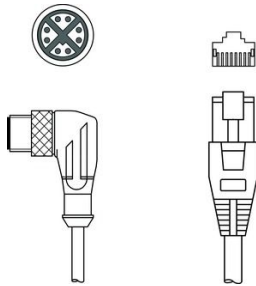

KSS GB-M12-8W-RJ45-A-P7-050

Interconnection cable

 Interface: Ethernet
Connection: Connector, M12 - RJ45 **Connection 01, version:** Angled
Connection 1, no. of pins: 8 -pin

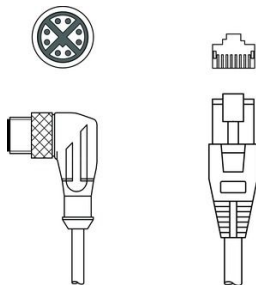

KSS GB-M12-8W-RJ45-A-P7-020

 
Interconnection cable

Interface: Ethernet
Connection: Connector, M12 - RJ45 **Connection 01, version:** Angled
Connection 1, no. of pins: 8 -pin

KSS ET-M12-4W-RJ45-A-P7-150

Interconnection cable

Interface: Ethernet
Connection: Connector, M12 - RJ45 **Connection 01, version:** Angled
Connection 1, no. of pins: 4 -pin

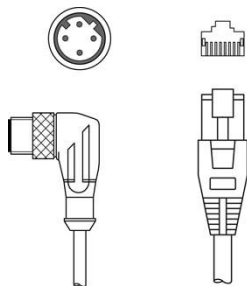


KSS ET-M12-4W-RJ45-A-P7-050

Interconnection cable

Interface: Ethernet

Connection: Connector, M12 - RJ45 **Connection 01, version:** Angled

 Connection 1, no. of pins: 4 -pin

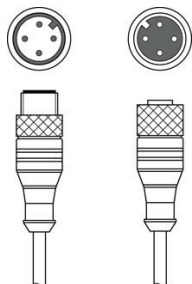


KDS U-M12-4A-M12-4A-P1-020-24X

Interconnection cable

Connection: Connector, M12 -

Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

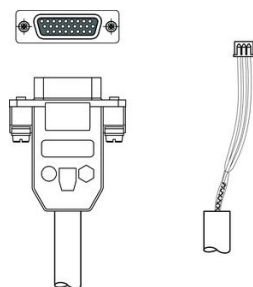


KB 900-500-MA 921-MA200i

Interconnection cable

Connection: Sub-D - JST ZHR **Connection 01, version:** Axial, Female **Connection**

 1, no. of pins: 25 -pin

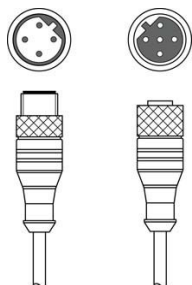


KDS PB-M12-4A-M12-4A-P3-300

Interconnection cable

Interface: PROFIBUS DP **Connection:** Connector, M12 -

Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

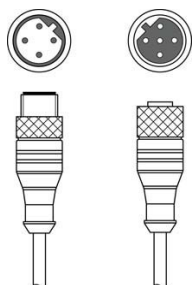

KDS PB-M12-4A-M12-4A-P3-150

 
Interconnection cable

Interface: PROFIBUS DP **Connection:** Connector, M12 -

Connector, M12

Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

KDS PB-M12-4A-M12-4A-P3-100 Interconnection cable

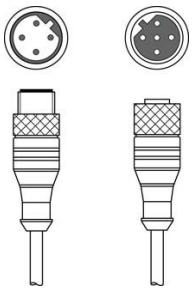


KDS PB-M12-4A-M12-4A-P3-050

Interconnection cable

Interface: PROFIBUS DP **Connection:** Connector, M12 -

Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

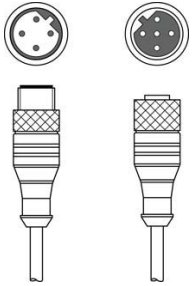


KDS PB-M12-4A-M12-4A-P3-020

Interconnection cable

Interface: PROFIBUS DP **Connection:** Connector, M12 -

Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

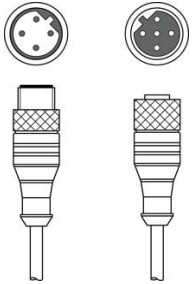


KDS PB-M12-4A-M12-4A-P3-010

Interconnection cable

Interface: PROFIBUS DP **Connection:** Connector, M12 -

Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

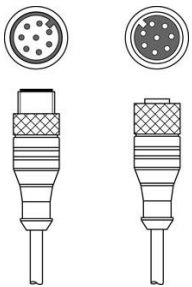


KDS S-M12-8A-M12-8A-P1-100

Interconnection cable

Connection: Connector, M12 -

Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 8 -pin

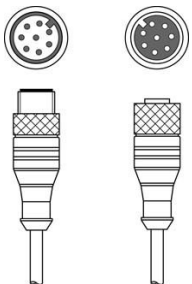

KDS S-M12-8A-M12-8A-P1-050

Interconnection cable

Connection: Connector, M12 -

Connector, M12

Connection 01, version: Axial **Connection 1, no. of pins:** 8 -pin

 
KDS S-M12-8A-M12-8A-P1-020

Interconnection cable

Connection: Connector, M12 -

Connector, M12

Connection 01, version: Axial **Connection 1, no. of pins:** 8 -pin

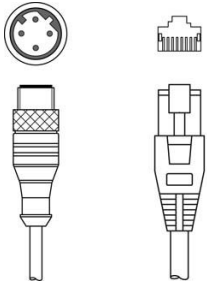


KSS ET-M12-4A-RJ45-A-P7-300

Interconnection cable

Interface: Ethernet

 Connection: Connector, M12 - RJ45 **Connection 01, version:** Axial **Connection 1, no. of pins:** 4 -pin

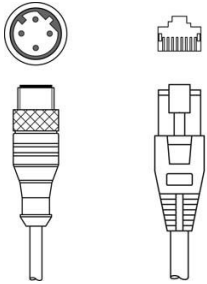


KSS ET-M12-4A-RJ45-A-P7-150

Interconnection cable

Interface: Ethernet

 Connection: Connector, M12 - RJ45 **Connection 01, version:** Axial **Connection 1, no. of pins:** 4 -pin

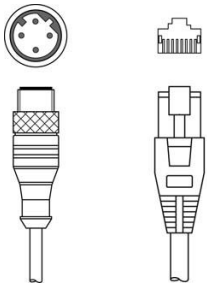


KSS ET-M12-4A-RJ45-A-P7-100

Interconnection cable

Interface: Ethernet

 Connection: Connector, M12 - RJ45 **Connection 01, version:** Axial **Connection 1, no. of pins:** 4 -pin

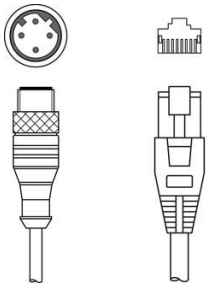


KSS ET-M12-4A-RJ45-A-P7-050

Interconnection cable

Interface: Ethernet

 Connection: Connector, M12 - RJ45 **Connection 01, version:** Axial **Connection 1, no. of pins:** 4 -pin

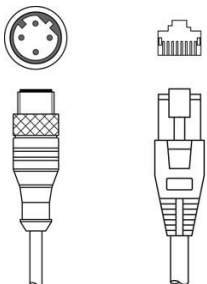

KSS ET-M12-4A-RJ45-A-P7-020

Interconnection cable

Interface: Ethernet

 
Connection: Connector, M12 - RJ45 **Connection 01, version:** Axial **Connection 1, no. of pins:** 4 -pin

KSS ET-M12-4A-RJ45-A-P7-006

Interconnection cable

Interface: Ethernet

Connection: Connector, M12 - RJ45 **Connection 01, version:** Axial

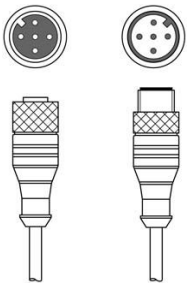


KDS S-M12-5A-M12-5A-P1-100

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

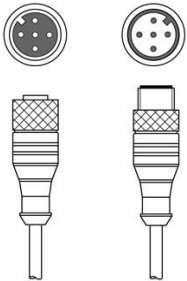


KDS S-M12-5A-M12-5A-P1-050

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

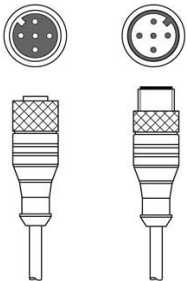


KDS S-M12-5A-M12-5A-P1-030

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

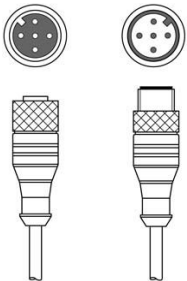


KDS S-M12-5A-M12-5A-P1-020

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

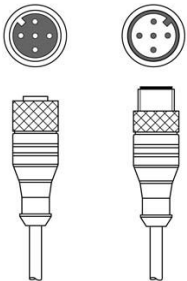


KDS S-M12-5A-M12-5A-P1-015

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

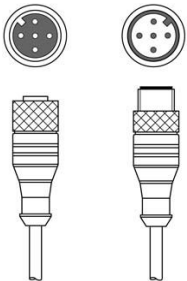


KDS S-M12-5A-M12-5A-P1-010

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

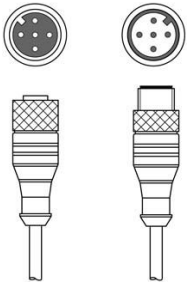


KDS S-M12-5A-M12-5A-P1-006

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

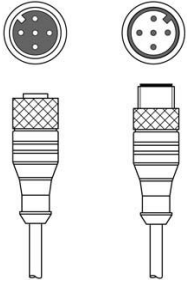


KDS S-M12-5A-M12-5A-P1-003

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

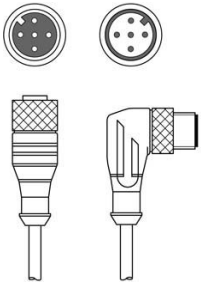


KDS S-M12-5A-M12-5W-P1-050

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

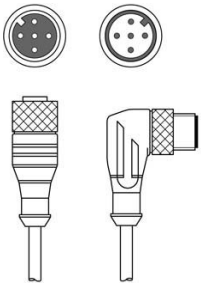


KDS S-M12-5A-M12-5W-P1-030

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

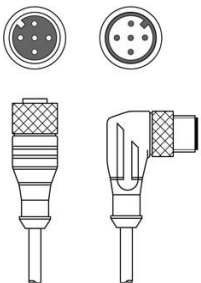

KDS S-M12-5A-M12-5W-P1-020

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 
Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

KDS S-M12-5A-M12-5W-P1-010

Interconnection cable

Connection: Connector, M12 -
Connector, M12

Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

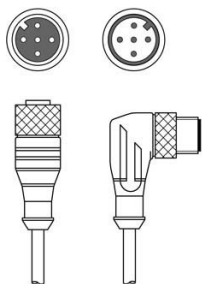


KDS S-M12-5A-M12-5W-P1-006

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

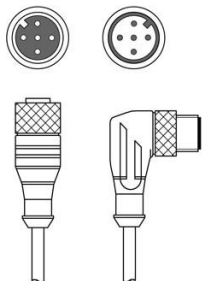


KDS S-M12-5A-M12-5W-P1-003

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

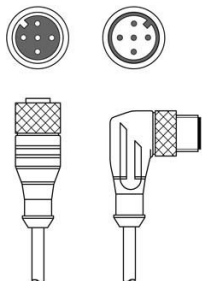


KDS S-M12-5A-M12-5W-V1-050

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

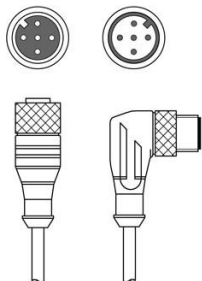


KDS S-M12-5A-M12-5W-V1-030

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

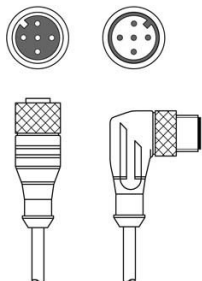


KDS S-M12-5A-M12-5W-V1-020

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

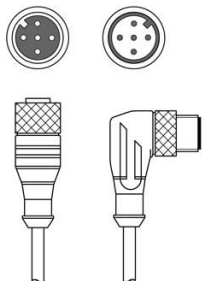


KDS S-M12-5A-M12-5W-V1-010

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 
Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

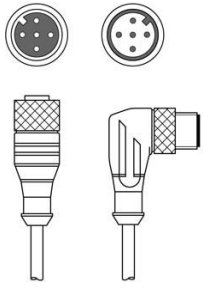

KDS S-M12-5A-M12-5W-V1-006

Interconnection cable

 
Connection: Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

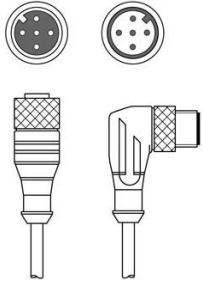

KDS S-M12-5A-M12-5W-V1-003

Interconnection cable

 
Connection: Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

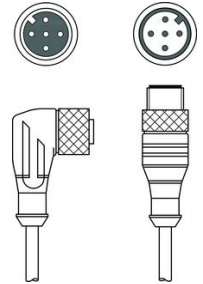

KDS U-M12-5W-M12-5A-P1-050-3DP

Interconnection cable

 
Connection: Connector, M12 -
Connector, M12
Connection 01, version: Angled **Connection 1, no. of pins:** 5 -pin

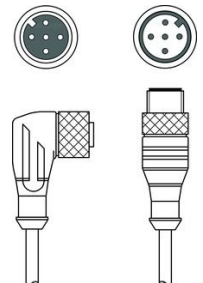

KDS U-M12-5W-M12-5A-P1-030-3DP

Interconnection cable

 Connection: Connector, M12 -
Connector, M12
Connection 01, version: Angled **Connection 1, no. of pins:** 5 -pin

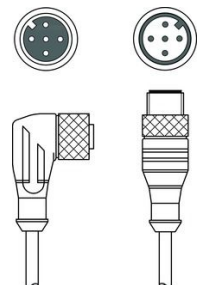

KDS U-M12-5W-M12-5A-P1-020-3DP

 
Interconnection cable

Connection: Connector, M12 -
Connector, M12
Connection 01, version: Angled **Connection 1, no. of pins:** 5 -pin

KDS U-M12-5W-M12-5A-P1-015-3DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12
Connection 01, version: Angled **Connection 1, no. of pins:** 5 -pin

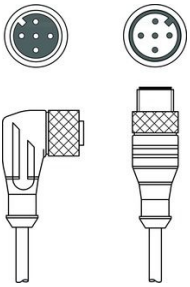


KDS U-M12-5W-M12-5A-P1-010-3DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 5 -pin

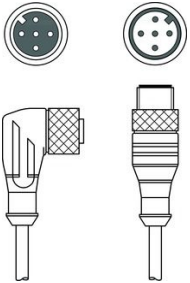


KDS U-M12-5W-M12-5A-P1-006-3DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 5 -pin

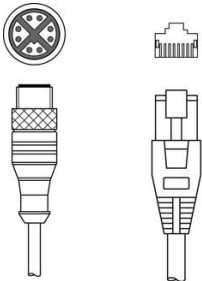


KSS GB-M12-8A-RJ45-A-P7-100

Interconnection cable

Interface: Ethernet

 Connection: Connector, M12 - RJ45 **Connection 01, version:** Axial
Connection 1, no. of pins: 8 -pin

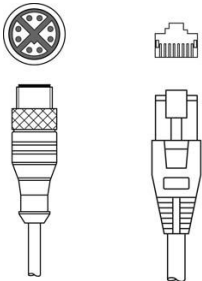


KSS ET-M12-8A-RJ45-A-P7-050

Interconnection cable

Interface: Ethernet

 Connection: Connector, M12 - RJ45 **Connection 01, version:** Axial
Connection 1, no. of pins: 8 -pin

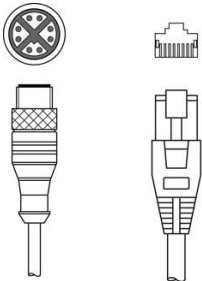


KSS GB-M12-8A-RJ45-A-P7-020

Interconnection cable

Interface: Ethernet

 Connection: Connector, M12 - RJ45 **Connection 01, version:** Axial
Connection 1, no. of pins: 8 -pin

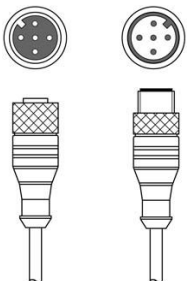


KDS U-M12-5A-M12-5A-V1-050

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

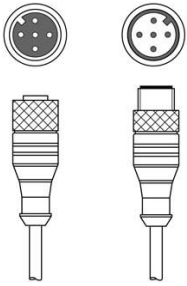


KDS U-M12-5A-M12-5A-V1-020

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

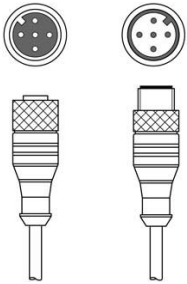


KDS U-M12-5A-M12-5A-V1-250

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

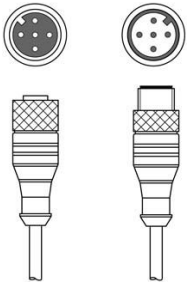


KDS U-M12-5A-M12-5A-V1-100

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

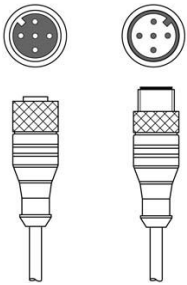


KDS U-M12-5A-M12-5A-V1-006

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

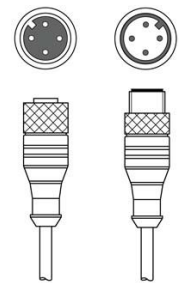

KDS U-M12-4A-M12-4A-V1-200

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 
Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

KDS U-M12-4A-M12-4A-V1-100

Interconnection cable

Connection: Connector, M12 -
Connector, M12

Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

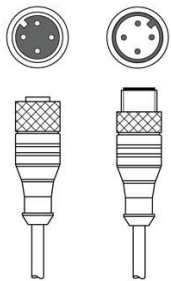


KDS U-M12-4A-M12-4A-V1-050

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

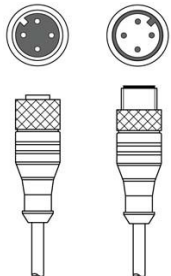


KDS U-M12-4A-M12-4A-V1-020

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

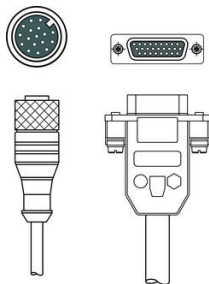

KB 900-5000

Interconnection cable

Connection: Connector, M12 - Sub-HD **Connection 01, version:** Axial **Connection 1, no. of pins:** 17 -pin

KB 900-1000


Interconnection cable

Connection: Connector, M12 - Sub-HD **Connection 01, version:** Axial **Connection 1, no. of pins:** 17 -pin

KB 900-3000

Interconnection cable

 Connection: Connector, M12 - Sub-HD **Connection 01, version:** Axial **Connection 1, no. of pins:** 17 -pin

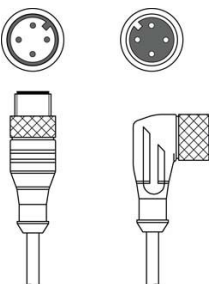


KDS U-M12-4W-M12-4A-P1-050-3DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 
Connection 01, version: Angled **Connection 1, no. of pins:** 4 -pin

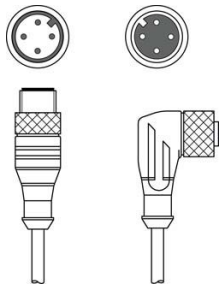

KDS U-M12-4W-M12-4A-P1-030-3DP

Interconnection cable

 
Connection: Connector, M12 -
Connector, M12
Connection 01, version: Angled **Connection 1, no. of pins:** 4
-pin

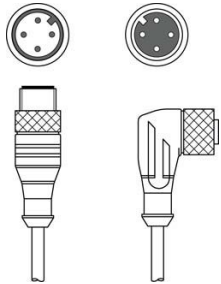

KDS U-M12-4W-M12-4A-P1-020-3DP

Interconnection cable

 
Connection: Connector, M12 -
Connector, M12
Connection 01, version: Angled **Connection 1, no. of pins:** 4
-pin

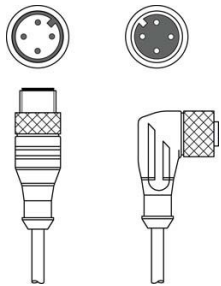

KDS U-M12-4W-M12-4A-P1-015-3DP

Interconnection cable

 
Connection: Connector, M12 -
Connector, M12
Connection 01, version: Angled **Connection 1, no. of pins:** 4
-pin

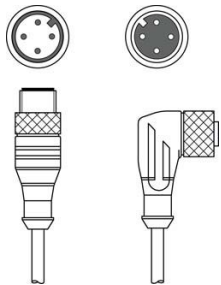

KDS U-M12-4W-M12-4A-P1-010-3DP

Interconnection cable

 
Connection: Connector, M12 -
Connector, M12
Connection 01, version: Angled **Connection 1, no. of pins:** 4
-pin

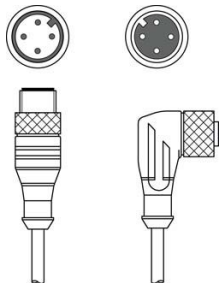

KDS U-M12-4W-M12-4A-P1-006-3DP

Interconnection cable

 
Connection: Connector, M12 -
Connector, M12
Connection 01, version: Angled **Connection 1, no. of pins:** 4
-pin

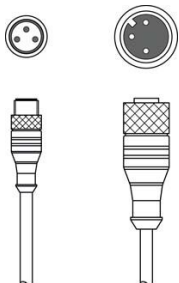

KDS U-M8-3A-M12-3A-P1-050

Interconnection cable

 
Connection: Connector, M8 - Connector, M12 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

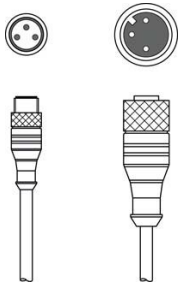

KDS U-M8-3A-M12-3A-P1-020

Interconnection cable

 
Connection: Connector, M8 - Connector, M12 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

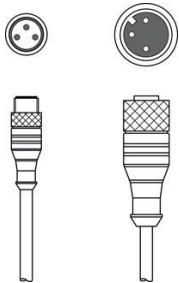

KDS U-M8-3A-M12-3A-P1-015

Interconnection cable

 
Connection: Connector, M8 - Connector, M12 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

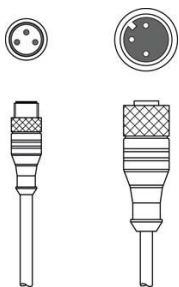

KDS U-M8-3A-M12-3A-P1-010

Interconnection cable

 
Connection: Connector, M8 - Connector, M12 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

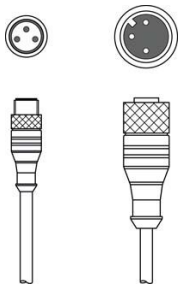

KDS U-M8-3A-M12-3A-P1-006

Interconnection cable

 
Connection: Connector, M8 - Connector, M12 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

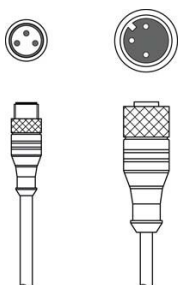

KDS U-M8-3A-M12-3A-P1-003

Interconnection cable

 
Connection: Connector, M8 - Connector, M12 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

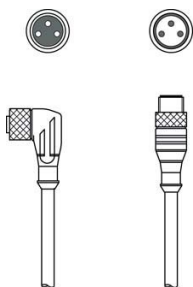

KDS U-M8-3W-M8-3A-P1-020-DP

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Angled
Connection 1, no. of pins: 3 -pin

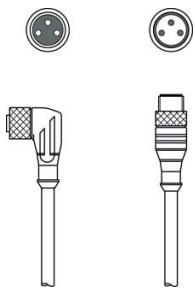

KDS U-M8-3W-M8-3A-P1-015-DP

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Angled
Connection 1, no. of pins: 3 -pin

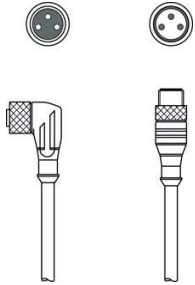

KDS U-M8-3W-M8-3A-P1-010-DP

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Angled
Connection 1, no. of pins: 3 -pin

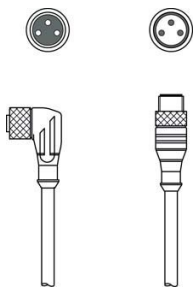

KDS U-M8-3W-M8-3A-P1-006-DP

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Angled
Connection 1, no. of pins: 3 -pin

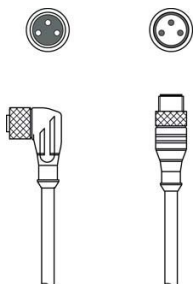

KDS U-M8-3W-M8-3A-P1-003-DP

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Angled
Connection 1, no. of pins: 3 -pin

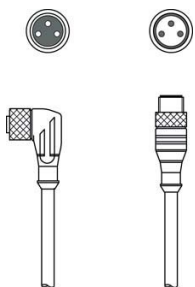

KDS U-M8-3W-M8-3A-P1-020

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Angled
Connection 1, no. of pins: 3 -pin

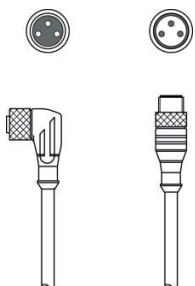

KDS U-M8-3W-M8-3A-P1-010

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Angled
Connection 1, no. of pins: 3 -pin

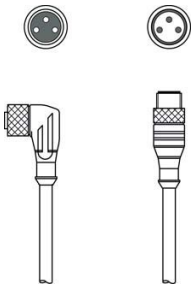

KDS U-M8-3W-M8-3A-P1-006

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Angled
Connection 1, no. of pins: 3 -pin

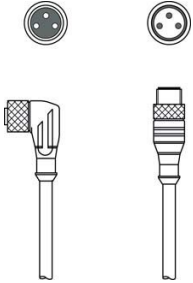

KDS U-M8-3W-M8-3A-P1-003

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Angled
Connection 1, no. of pins: 3 -pin

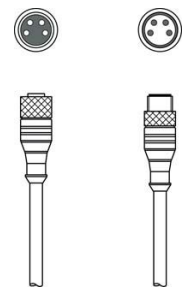

KDS U-M8-4A-M8-4A-P1-020

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 4 -pin

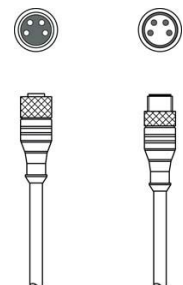

KDS U-M8-4A-M8-4A-P1-010

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 4 -pin

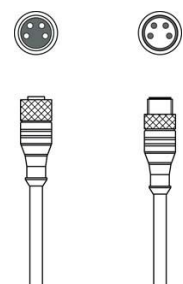

KDS U-M8-4A-M8-4A-P1-006

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 4 -pin

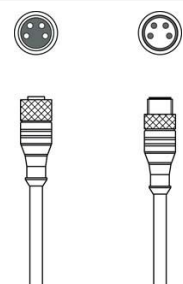

KDS U-M8-4A-M8-4A-P1-003

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 4 -pin

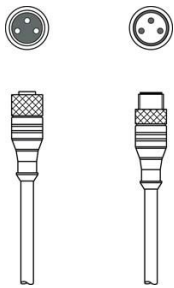

KDS U-M8-3A-M8-3A-P1-020-DP

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

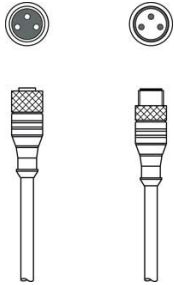

KDS U-M8-3A-M8-3A-P1-015-DP

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

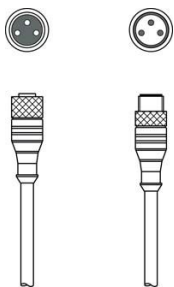

KDS U-M8-3A-M8-3A-P1-010-DP

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

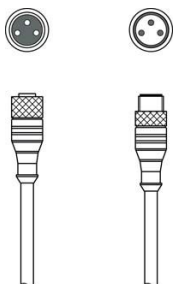

KDS U-M8-3A-M8-3A-P1-006-DP

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

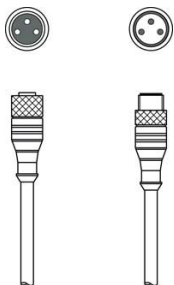

KDS U-M8-3A-M8-3A-P1-003-DP

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

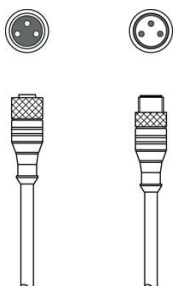

KDS U-M8-3A-M8-3A-P1-050

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

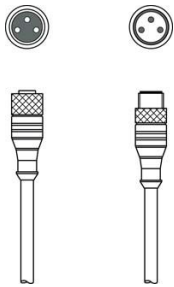

KDS U-M8-3A-M8-3A-P1-030

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

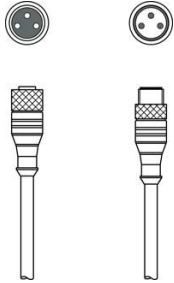

KDS U-M8-3A-M8-3A-P1-020

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

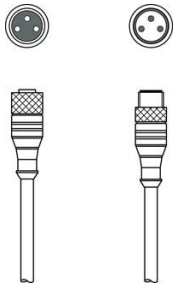

KDS U-M8-3A-M8-3A-P1-015

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

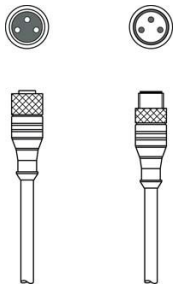

KDS U-M8-3A-M8-3A-P1-010

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

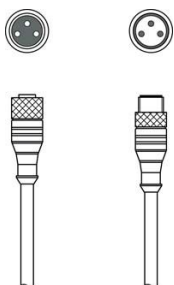

KDS U-M8-3A-M8-3A-P1-006

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

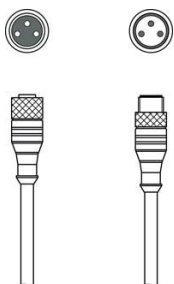

KDS U-M8-3A-M8-3A-P1-003

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

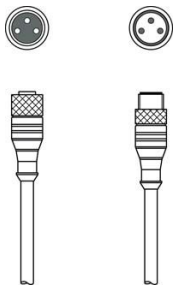

KDS U-M8-3A-M8-3A-V1-020

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

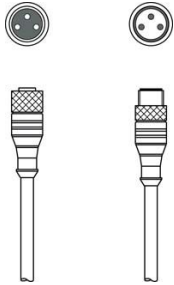

KDS U-M8-3A-M8-3A-V1-010

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

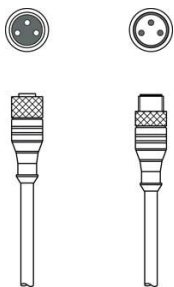

KDS U-M8-3A-M8-3A-V1-006

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

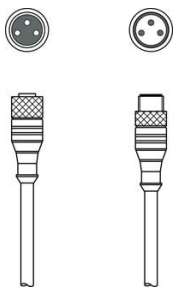

KDS U-M8-3A-M8-3A-V1-003

Interconnection cable

 
Connection: Connector, M8 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 3 -pin

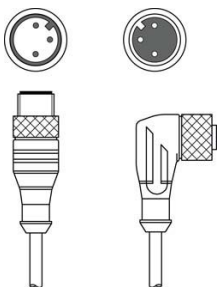

KDS U-M12-3W-M12-3A-P1-050-DP

Interconnection cable

 
Connection: Connector, M12 -
Connector, M12
Connection 01, version: Angled **Connection 1, no. of pins:** 3
-pin

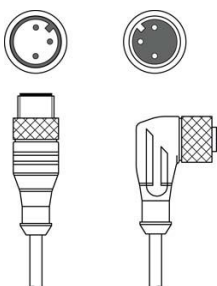

KDS U-M12-3W-M12-3A-P1-030-DP

Interconnection cable

 Connection: Connector, M12 -
Connector, M12
Connection 01, version: Angled **Connection 1, no. of pins:** 3
-pin

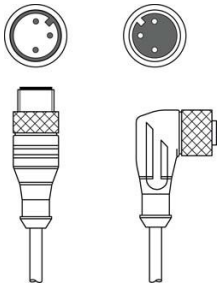


KDS U-M12-3W-M12-3A-P1-020-DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 3 -pin

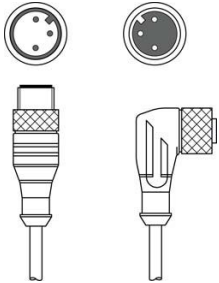


KDS U-M12-3W-M12-3A-P1-010-DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 3 -pin

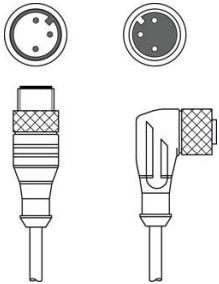


KDS U-M12-3W-M12-3A-P1-006-DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 3 -pin

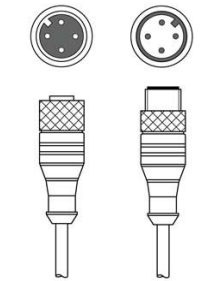


KDS U-M12-4A-M12-4A-P1-050-DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

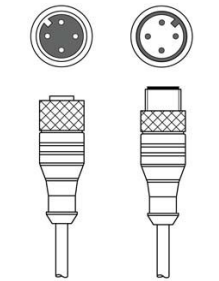


KDS U-M12-4A-M12-4A-P1-030-DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

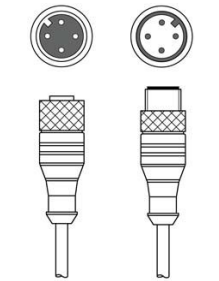


KDS U-M12-4A-M12-4A-P1-020-DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

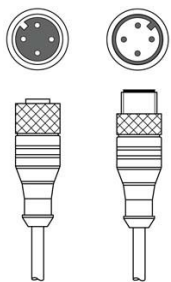


KDS U-M12-4A-M12-4A-P1-010-DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

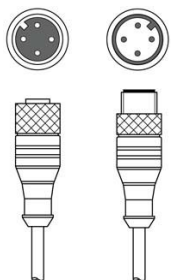


KDS U-M12-4A-M12-4A-P1-006-DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

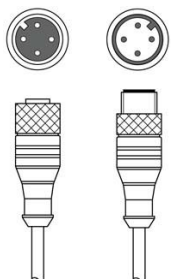


KDS U-M12-4A-M12-4A-P1-003-DP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

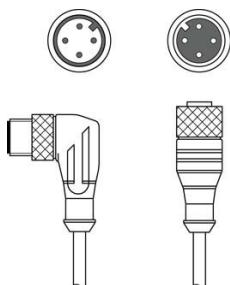


KDS U-M12-4A-M12-4W-P1-050

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

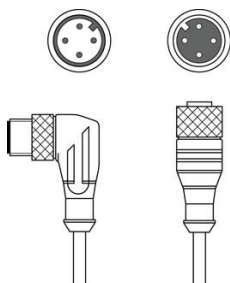

KDS U-M12-4A-M12-4W-P1-030

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 
Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

KDS U-M12-4A-M12-4W-P1-020

Interconnection cable

Connection: Connector, M12 -
Connector, M12

Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

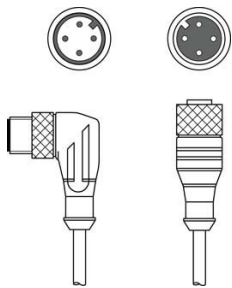


KDS U-M12-4A-M12-4W-P1-010

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

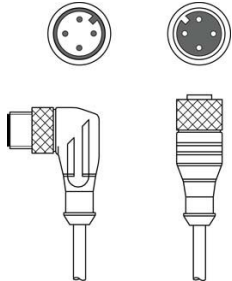


KDS U-M12-4A-M12-4W-P1-006

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

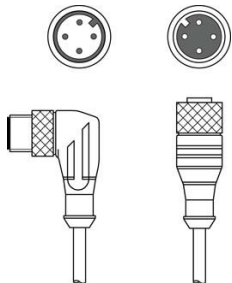


KDS U-M12-4A-M12-4W-P1-003

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

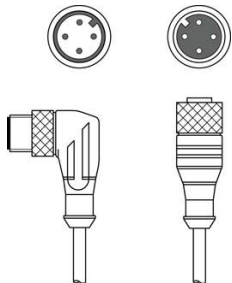


KDS U-M12-4A-M12-4W-V1-050

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

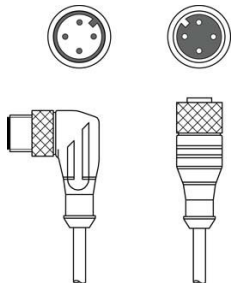


KDS U-M12-4A-M12-4W-V1-030

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

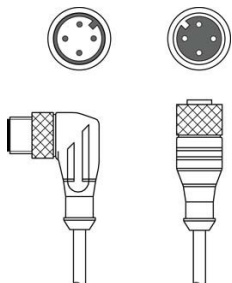


KDS U-M12-4A-M12-4W-V1-020

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

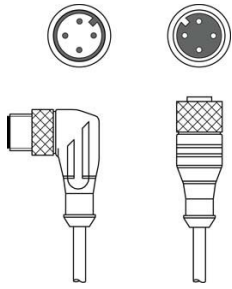


KDS U-M12-4A-M12-4W-V1-010

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

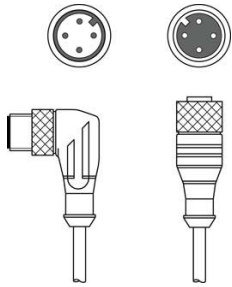


KDS U-M12-4A-M12-4W-V1-006

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

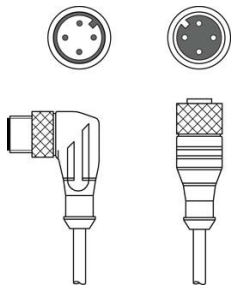


KDS U-M12-4A-M12-4W-V1-003

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

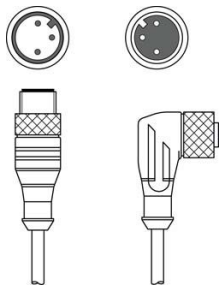


KDS U-M12-3W-M12-3A-P1-050

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 3 -pin

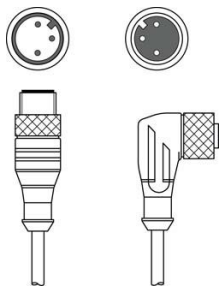

KDS U-M12-3W-M12-3A-P1-030

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 
Connection 01, version: Angled **Connection 1, no. of pins:** 3 -pin

KDS U-M12-3W-M12-3A-P1-020

Interconnection cable

Connection: Connector, M12 -
Connector, M12

Connection 01, version: Angled **Connection 1, no. of pins:** 3 -pin

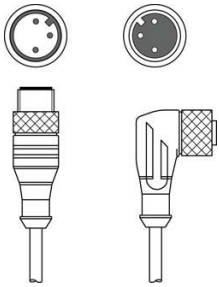


KDS U-M12-3W-M12-3A-P1-010

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 3 -pin

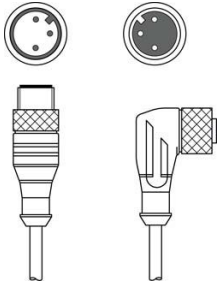


KDS U-M12-3W-M12-3A-P1-006

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 3 -pin

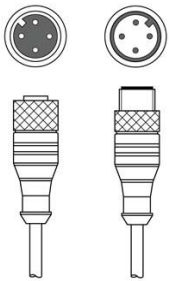


KDS U-M12-4A-M12-4A-P1-100

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

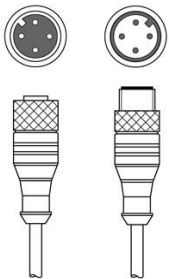


KDS U-M12-4A-M12-4A-P1-050

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

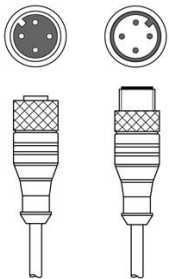


KDS U-M12-4A-M12-4A-P1-030

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

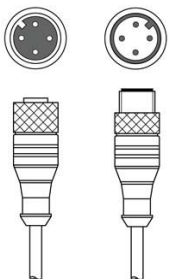


KDS U-M12-4A-M12-4A-P1-020

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

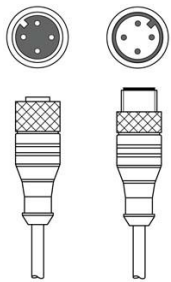


KDS U-M12-4A-M12-4A-P1-015

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

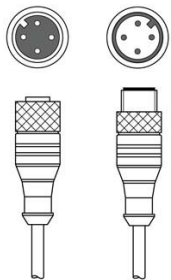


KDS U-M12-4A-M12-4A-P1-010

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

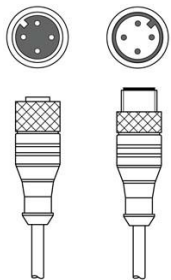


KDS U-M12-4A-M12-4A-P1-006

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

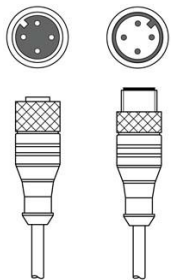


KDS U-M12-4A-M12-4A-P1-003

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

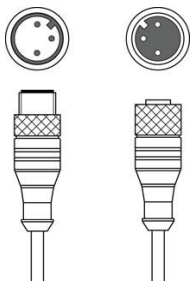

KDS U-M12-3A-M12-3A-P1-050

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 
Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

KDS U-M12-3A-M12-3A-P1-030

Interconnection cable

Connection: Connector, M12 -
Connector, M12

Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

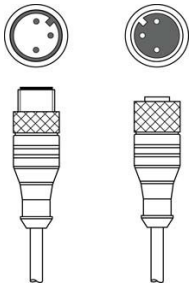


KDS U-M12-3A-M12-3A-P1-020

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

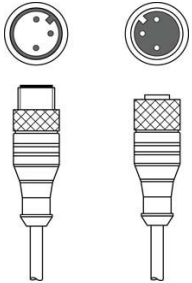


KDS U-M12-3A-M12-3A-P1-010

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

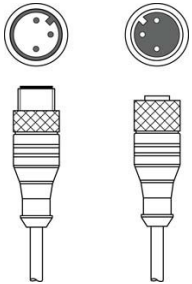


KDS U-M12-3A-M12-3A-P1-006

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

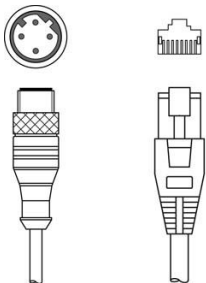


KSS ET-M12-4A-RJ45-A-P7-010

Interconnection cable

Interface: Ethernet

 Connection: Connector, M12 - RJ45 **Connection 01, version:** Axial **Connection 1, no. of pins:** 4 -pin

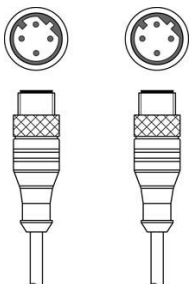


KSS ET-M12-4A-M12-4A-P7-010

Interconnection cable

Interface: Ethernet **Connection:** Connector, M12 -

Connector, M12

 
Connection 01, version: Axial **Connection 1, no. of pins:** 4 -pin

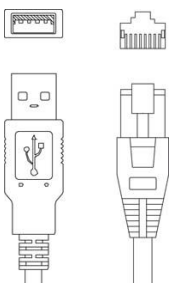

KSS CR-USB-AA-RJ41-A-T0-018

Interconnection cable

 Interface: USB **Connection:** USB - RJ41

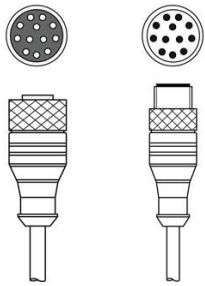


KDS S-M12-CA-M12-CA-P1-100

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 12 -pin

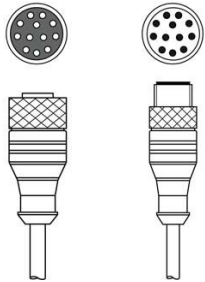


KDS S-M12-CA-M12-CA-P1-050

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 12 -pin

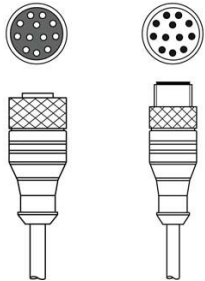


KDS S-M12-CA-M12-CA-P1-020

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 12 -pin

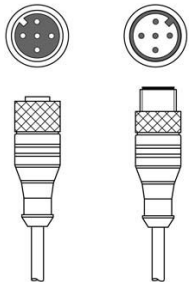


KDS DN-M12-5A-M12-5A-P3-200

Interconnection cable

Interface: DeviceNet, CANopen **Connection:** Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

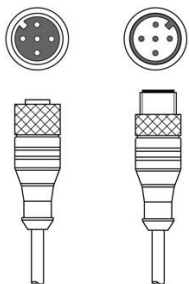

KDS DN-M12-5A-M12-5A-P3-100

Interconnection cable

 
Interface: DeviceNet, CANopen **Connection:** Connector, M12 -
Connector, M12

Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

KDS DN-M12-5A-M12-5A-P3-050

Interconnection cable


Interface: DeviceNet, CANopen **Connection:** Connector, M12 -
Connector, M12

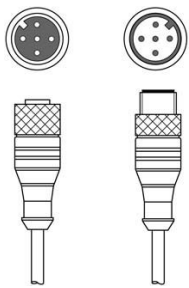

KDS DN-M12-5A-M12-5A-P3-020

Interconnection cable

 Interface: DeviceNet, CANopen **Connection:** Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

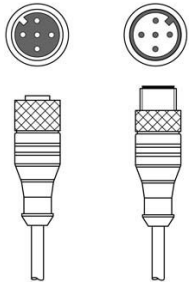

KDS DN-M12-5A-M12-5A-P3-010

Interconnection cable

Interface: DeviceNet, CANopen **Connection:** Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin



KB 307-10000 FLEX Interconnection

cable

Interface: SSI
Connection: Socket connector - Open end



KB 301-10000 Interconnection

cable

Interface: RS 232
Connection: Socket connector - JST ZHR



KB 307-3000

Interconnection cable

 
Interface: SSI
Connection: Socket connector - Socket connector



K-DS M12A-8P-0,75m-LxS36-CP

Configuration cable


Connection: Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 8 -pin

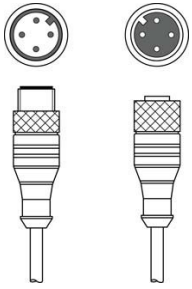

K-DS M12A-M12A-4P-0,2m-X1-PVC

Interconnection cable

 
Connection: Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 4 -
pin

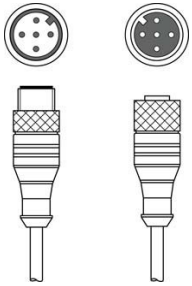

KB DN/CAN-20000 SBA

Interconnection cable

 
Interface: CANopen, DeviceNet **Connection:** Connector,
M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 -
pin

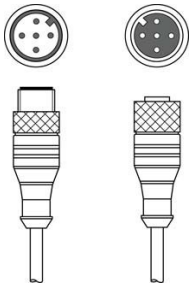

KB DN/CAN-10000 SBA

Interconnection cable

 
Interface: DeviceNet, CANopen **Connection:** Connector,
M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 -
pin

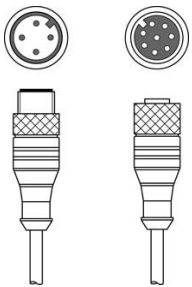

K-DS M12A-8P-4P-5m-L-PUR

Interconnection cable

 Connection: Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 8 -
pin

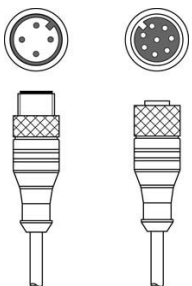


K-DS M12A-8P-4P-2m-L-PUR

Interconnection cable

Connection: Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 8 -
pin


KB 301-3000-MA200 Interconnection cable

 Interface: RS 232
Connection: Socket connector - JST ZHR

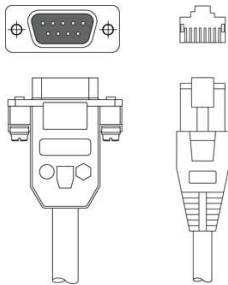

KB RS232-1 HS 65x8 Interconnection cable

 
Interface: RS 232 **Connection:** RJ41 - Sub-D

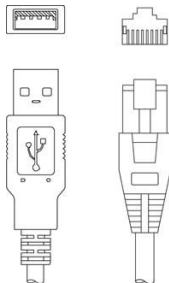

KB USB-1 HS 65x8 Interconnection


cable

 Interface: USB **Connection:** RJ41 - USB

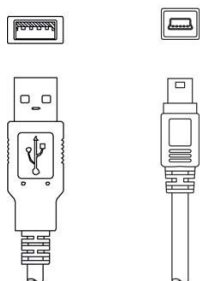

KB USB A - USB miniB Service line

 
Interface: USB **Connection:** USB - USB

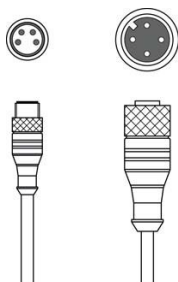

K-DS M12A-M8A-4P-0,3m-PVC

Interconnection cable

 
Connection: Connector, M12 - Connector, M8 **Connection 01, version:** Axial
Connection 1, no. of pins: 4 -pin

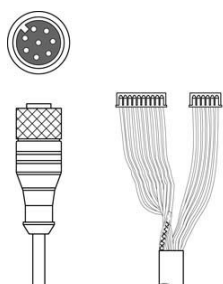

K-DS M12A-MA-8P-3m-S-PUR

Interconnection cable

 
Connection: Connector, M12 - JST ZHR **Connection 01, version:** Axial
Connection 1, no. of pins: 8 -pin

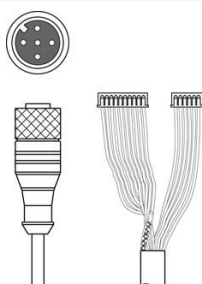

K-DS M12A-MA-5P-3m-S-PUR

Interconnection cable

 
Connection: Connector, M12 - JST ZHR **Connection 01, version:** Axial
Connection 1, no. of pins: 5 -pin

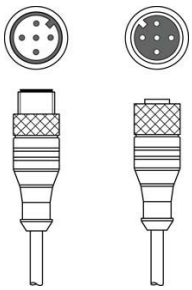

KB DN/CAN-5000 SBA

Interconnection cable

 
Interface: DeviceNet, CANopen **Connection:** Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 - pin

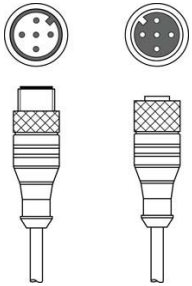

KB DN/CAN-2000 SBA

Interconnection cable

 Interface: DeviceNet, CANopen **Connection:** Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 - pin

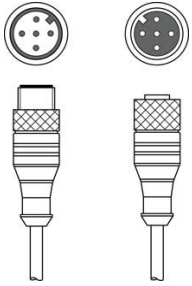

KB DN/CAN-1000 SBA


Interconnection cable

Interface: DeviceNet, CANopen **Connection:** Connector, M12 -
Connector, M12
Connection 01, version: Axial **Connection 1, no. of pins:** 5 - pin



KB 301-3000 Interconnection cable

 Interface: RS 232, RS 422, RS 485 **Connection:** Socket connector - JST ZHR

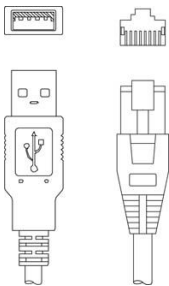

KB USB-2 IT190x Interconnection

 
cable

Interface: USB **Connection:** RJ41 - USB

KB USB-1 IT190x Interconnection

cable

Interface: USB **Connection:** RJ41 - USB

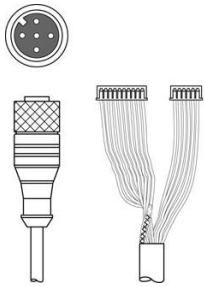


KB JST-M12A-5P-3000

Interconnection cable


Interface: RS 232

 Connection: Connector, M12 - JST ZHR **Connection 01, version:** Axial **Connection 1, no. of pins:** 5 -pin

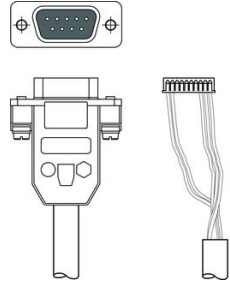

KB JST-HS-300 Interconnection cable

 Interface: RS 232 **Connection:** JST ZHR - Sub-D

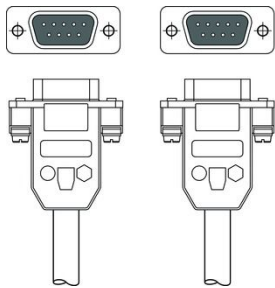


KB DSub-9P-3000

Interconnection cable

Interface: RS 232

 Connection: Sub-D - Sub-D **Connection 01, version:** Axial, Female **Connection 1, no. of pins:** 9 -pin

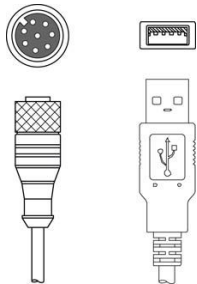


KB M12A-8P-USB-3000

Connection cable

Interface: USB

 Connection: Connector, M12 - USB **Connection 01, version:** Axial **Connection 1, no. of pins:** 8 -pin

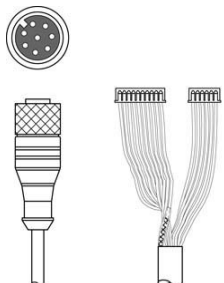


KB JST-M12A-8P-3000

Interconnection cable

Interface: RS 232

 
Connection: Connector, M12 - JST ZHR **Connection 01, version:** Axial **Connection 1, no. of pins:** 8 -pin

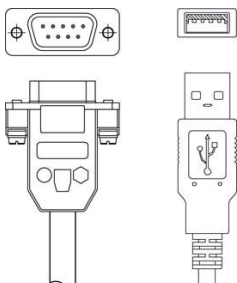

KB-RS232-USB

Adapter cable

 
Interface: RS 232, USB **Connection:** Sub-D - USB **Connection 01, version:** Axial, Male **Connection 1, no. of pins:** 9 -pin

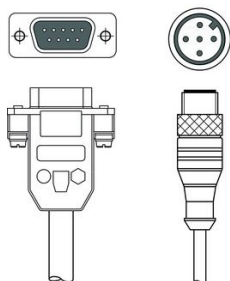

KB-Service-3000

Service line

 
Connection: Connector, M12 - Sub-D **Connection 01, version:** Axial
Connection 1, no. of pins: 5 -pin

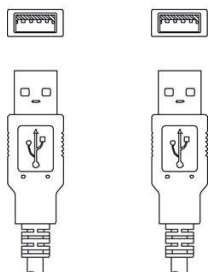

KB USB A - USB A Interconnection

cable

 
Interface: USB **Connection:** USB - USB

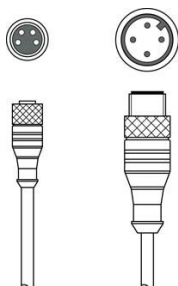

K-DS M8A-M12A-4P-0,3m-PVC

Interconnection cable

 
Connection: Connector, M8 - Connector, M12 **Connection 01, version:** Axial
Connection 1, no. of pins: 4 -pin

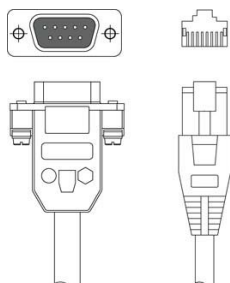

KB TTL-RS232/PIN9 IT4xxx

Interconnection cable

 
Interface: RS 232, TTL
Connection: Sub-D - RJ41 **Connection 01, version:** Axial, Female
Connection 1, no. of pins: 9 -pin

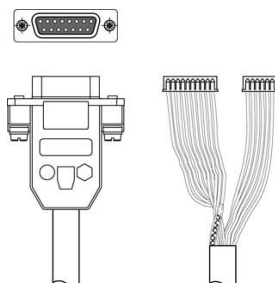

KB 031-1000

Interconnection cable

 
Interface: RS 232, RS 485 **Connection:** Sub-D - JST ZHR **Connection 01, version:** Axial, Female
Connection 1, no. of pins: 15 -pin

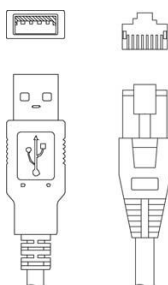

KB USB IT4xxx Interconnection

cable

 
Interface: USB **Connection:** USB - RJ41

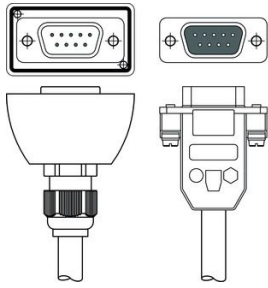

CB-D9-10000-5GF/GM

Interconnection cable

 
Connection: Sub-D - Sub-D **Connection 01**, **version:** Axial, Female **Connection 1**, **no. of pins:** 9 -pin

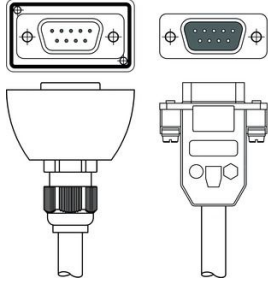

CB-D9-5000-5GF/GM

Interconnection cable

 
Connection: Sub-D - Sub-D **Connection 01**, **version:** Axial, Female **Connection 1**, **no. of pins:** 9 -pin

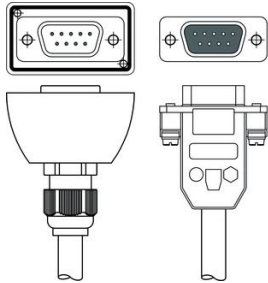

CB-D9-3000-5GF/GM

Interconnection cable

 
Connection: Sub-D - Sub-D **Connection 01**, **version:** Axial, Female **Connection 1**, **no. of pins:** 9 -pin

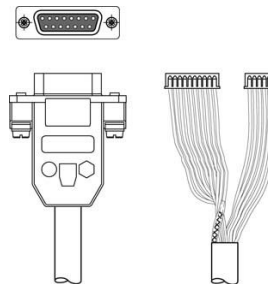

KB 031-3000

Interconnection cable

 
Interface: RS 232, RS 485 **Connection:** Sub-D - JST ZHR **Connection 01**, **version:** Axial, Female **Connection 1**, **no. of pins:** 15 -pin

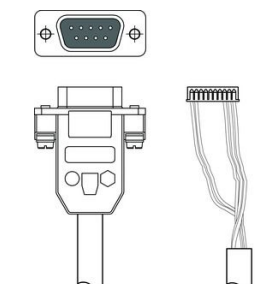

K-CB-SUBP-3000

Diagnosis cable

 
Connection: Socket connector - Sub-D

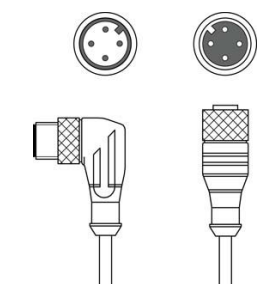

KDS U-M12-4A-M12-4W-P1-020-24X

Interconnection cable

 Connection: Connector, M12 - Connector, M12
Connection 01, **version:** Axial **Connection 1**, **no. of pins:** 4 -pin

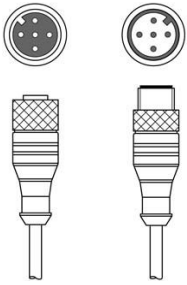


CB-M12-1000-5GF/GM

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 5 -pin

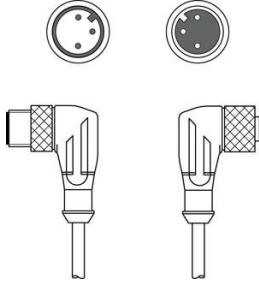


CB-M12-1500X-3WF/WM

Muting cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Angled **Connection 1, no. of pins:** 3 -pin

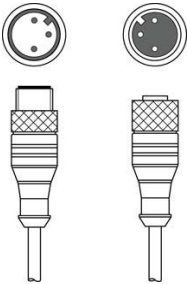


CB-M12-1500X-3GF/GM

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

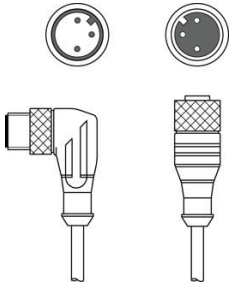


CB-M12-1500X-3GF/WM

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

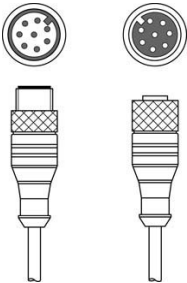


CB-M12-5000E-8TP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 8 -pin

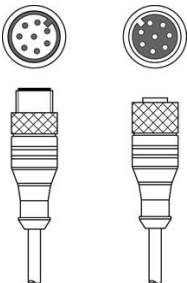


CB-M12-2000E-8TP

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 8 -pin

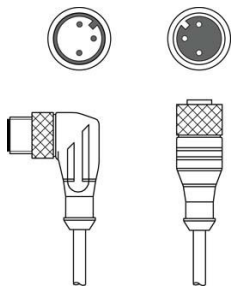


CB-M12-15000-3GF/WM

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

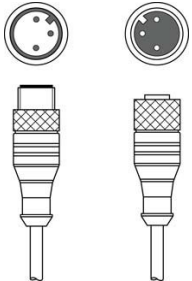


CB-M12-15000-3GF/GM

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

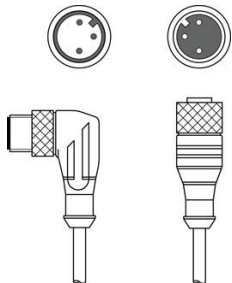


CB-M12-5000-3GF/WM

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

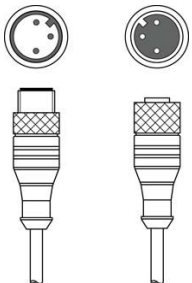


CB-M12-5000-3GF/GM

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

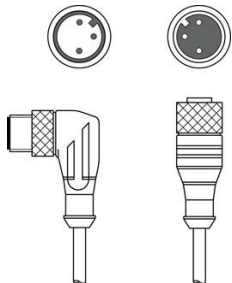


CB-M12-1500-3GF/WM

Interconnection cable

Connection: Connector, M12 -
Connector, M12

 Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

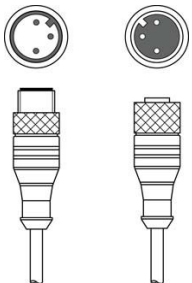

CB-M12-1500-3GF/GM

Interconnection cable

Connection: Connector, M12 -
Connector, M12

Connection 01, version: Axial **Connection 1, no. of pins:** 3 -pin

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: ezu@nt-rt.ru || сайт: <https://leuze.nt-rt.ru/>