

Модульные соединительные блоки для BCL и BPS

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: ezu@nt-rt.ru || сайт: <https://leuze.nt-rt.ru/>



MK 338

Connection unit

Interface: EtherCAT

Suitable for: BCL 338i, BPS 338i



MS 338

Connection unit

Interface: EtherCAT

Suitable for: BCL 338i, BPS 338i



ME 338 103

Connection unit

Interface: EtherCAT

Suitable for: BCL 338i, BPS 338i



ME 338 214

Connection unit

Interface: EtherCAT **Suitable for:** BCL 338i



ME 338 104

Connection unit

Interface: EtherCAT **Suitable for:** BCL 338i



ME 348 104

Connection unit

Interface: PROFINET **Suitable for:** BCL 348i



ME 348 214

Connection unit

Interface: PROFINET **Suitable for:** BCL 348i



ME 348 103

Connection unit

Interface: PROFINET **Suitable for:** BCL 348i



ME 308 103

Connection unit

Interface: Ethernet **Suitable for:** BCL 308i



ME 308 104

Connection unit

Interface: Ethernet **Suitable for:** BCL 308i



MA 150

Modular connection unit



MSC 900 - 1000

Modular connection unit

Series: MSC 900
Interface: Ethernet, RS 232
Suitable for: BCL 900i series bar code readers



MA 900

Modular connection unit

Series: MA 900

Interface: RS 232, RS 422

Suitable for: BCL 900i series bar code readers



MK 307

Connection unit

Interface: SSI **Suitable for:** BPS 307i



MS 307

Connection unit

Interface: SSI **Suitable for:** BPS 307i



MS 358

Connection unit

Interface: EtherNet IP **Suitable for:**
BCL 358i



MK 358

Connection unit

Interface: EtherNet IP **Suitable for:**
BCL 358i



MS 348

Connection unit

Interface: PROFINET
Suitable for: BCL 348i, BPS 348i



MS 304

Connection unit

Interface: PROFIBUS DP **Suitable for:** BCL 304i, BPS 304i



MS 301

Connection unit

Interface: MultiNet Plus **Suitable for:** BCL 301i, BPS 301i



MS 300

Connection unit

Interface: RS 232
Suitable for: BCL 300i, BPS 300i



MK 348

Connection unit

Interface: PROFINET
Suitable for: BCL 348i, BPS 348i



MK 308

Connection unit

Interface: Ethernet **Suitable for:** BCL 308i



MK 304

Connection unit

Interface: PROFIBUS DP **Suitable for:** BCL 304i, BPS 304i



MK 301

Connection unit

Interface: MultiNet Plus **Suitable for:** BCL 301i, BPS 301i



MK 300

Connection unit

Interface: RS 232
Suitable for: BCL 300i, BPS 300i



MS 308

Connection unit

Interface: Ethernet **Suitable for:** BCL 308i



MA 100

Modular connection unit

Series: MA 100
Interface: RS 232, RS 485 **Suitable for:** BCL 300i, BCL 301i



MS 37 103

Connection unit

Interface: SSI **Suitable for:** BPS 37



MS 34 105

Connection unit

Interface: PROFIBUS DP **Suitable for:** BCL 34, BPS 34



MS 34 103

Connection unit

Interface: PROFIBUS DP **Suitable for:** BCL 34, BPS 34



MA 8-01

Modular connection unit

Series: MA 8
Interface: RS 485
Suitable for: BCL 8 series bar code readers, BPS 8 series bar co...



MA 8-02

Modular connection unit

Series: MA 8
Interface: RS 485
Suitable for: BCL 8 series bar code readers, BPS 8 series bar co...



MA 8.1

Modular connection unit

Series: MA 8
Interface: RS 232
Suitable for: BCL 8 series bar code readers



MA 4.7

Connection unit

Series: MA 4
Interface: SSI
Suitable for: BPS 3x series bar code positioning system



MA 4

Connection unit

Series: MA 4
Interface: RS 232, RS 485
Suitable for: BCL 2x series bar code readers, BCL 3x series bar ...



MA 31 130

Connection unit

Series: MA 31 **Interface:** RS 485, RS 422



MA 31 110

Connection unit

Series: MA 31 **Interface:** RS 232, RS 485



MA 31 100

Connection unit

Series: MA 31 **Interface:** RS 485



MA 2 L

Connection unit

Series: MA 2

Interface: RS 232, RS 485

Suitable for: BCL 2x series bar code readers, BCL 3x series bar ...



MA 2

Connection unit

Series: MA 2

Interface: RS 232, RS 485

Suitable for: BCL 2x series bar code readers, LSIS 222 series st...

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: ezu@nt-rt.ru || сайт: <https://leuze.nt-rt.ru/>