

Адаптеры

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: ezu@nt-rt.ru || сайт: <https://leuze.nt-rt.ru/>



D U-M12-CA-K PWR27 Adapter

Number of connections: 2 Piece(s) **Connection:** Connector, M12 - Jack socket



YV U-SDD-84-83-83-X01

Y distribution box

Number of connections: 3 Piece(s) **Connection:** Connector, M8 - Connector, M8 - Connector, M8



YV U-SDD-25-25-25-X02-S

Y distribution box

Number of connections: 3 Piece(s) **Connection:** Connector, M12 - Connector, M12 - Connector, M12



D PL-M12-5A-PWR Adapter

Number of connections: 2 Piece(s) **Connection:** Connector, M12 - Jack socket



KDS U-M12-5A-M12-5A-P1-000-24X

Adapter

Number of connections: 2 Piece(s) **Connection:** Connector, M12 - Connector, M12



YV U-DDS-25-25-25-X01

Y distribution box

Number of connections: 3 Piece(s) **Connection:** Connector, M12 - Connector, M12 - Connector, M12



YV S-DSS-28-28-28-X05

Y distribution box

Number of connections: 3 Piece(s) **Connection:** Connector, M12 -
Connector, M12 - Connector, M...



YV U-SDD-25-83-83-X04

Y distribution box

Number of connections: 3 Piece(s) **Connection:** Connector, M8 - Connector, M8 -
Connector, M12



YV U-SDD-25-25-25-X03

Y distribution box

Number of connections: 3 Piece(s) **Connection:** Connector, M12 -
Connector, M12 - Connector, M...



YV U-SDD-25-25-25-X02

Y distribution box


Number of connections: 3 Piece(s) **Connection:** Connector, M12 -
Connector, M12 - Connector, M...



YV U-SDD-25-25-25-X01

Y distribution box

Number of connections: 3 Piece(s) **Connection:** Connector, M12 -
Connector, M12 - Connector, M...

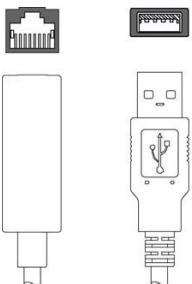

KDS ET-RJ45-A-USB3-A-P4-000 Adapter cable

Number of connections: 2 Piece(s) **Connection:** RJ45 - USB



KDS U-M8-4A-M8-3A-P1-000

Adapter

Connection: Connector, M8 - Connector, M8



D M12A-12P-PWR Adapter

Number of connections: 2 Piece(s) **Connection:** Connector, M12 - Jack socket



K-SSPB M12A-M12A-2P-0,3m-S-PUR Interconnection cable

Connection: Connector, M12 - Connector, M12



KD 01-5-BA-PWR Adapter

Number of connections: 2 Piece(s) **Connection:** Connector, M12 - Jack socket



KD 01-8-BA-PWR Adapter

Number of connections: 2 Piece(s) **Connection:** Connector, M12 - Jack socket



KDS BUS OUT M12-T-5P

Adapter

Number of connections: 3 Piece(s) **Connection:** Connector, M12 - Connector, M12 - Connector, M...



KDS ET-M12 / RJ45 W-4P Adapter

Number of connections: 2 Piece(s) **Connection:** Connector, M12 - RJ45



TS 01-5-SA

Terminator plug

Number of connections: 1 Piece(s) **Connection:** Connector, M12



TS 02-4-SA

Terminator plug

Number of connections: 1 Piece(s) **Connection:** Connector, M12



ZK T/4.01-S12

Time module

Number of connections: 2 Piece(s) **Connection:** Connector, M12 -
Connector, M12



ZK T/4.00-S12

Time module

Number of connections: 2 Piece(s) **Connection:** Connector, M12 -
Connector, M12

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: ezu@nt-rt.ru || сайт: <https://leuze.nt-rt.ru/>